



600 3rd Ave, Laval, QC, H7R 4J4  
 Tel: (514)631-2173  
 Fax:(450)627-2199  
 email: info@aeroneuf.com



ATR-72 CAPABILITY LISTING

Part Number	Manufacturer	Description
1826-1	Avtech	D.C. Lamp Dimmer
2136-315-80-11	Sextant	Ammeter Indicator
2136-430-80-11	Sextant	De-Icing Monitoring Indicator
2593379-1	Honeywell/Sperry	Dual Remote Compensator
2593379-2	Honeywell/Sperry	Dual Remote Compensator
2794-901-00-11	Sextant	Power Generation Display Panel
2CM9AXX Series	AMETEK/GE	Tachometer Generator
30005-0000-XX	Simmonds Precision	Torque Signal Conditioner
4031609-9XX	Honeywell/Sperry	TAS/Temp Indicator
4679-750-80-11	Sextant	Flap Position Indicator
4679-751-80-11	Sextant	Flap Position Indicator
4679-752-80-10	Sextant	Flap Position Indicator
4679-753-80-10	Sextant	Flap Position Indicator
4679-754-80-10	Sextant	Flap Position Indicator
4679-764-80-10	Sextant	Flap Position Indicator
4863-501-80-11	Sextant	Trim Indicator
4863-502-80-10	Sextant	Trim Indicator
4863-503-80-10	Sextant	Trim Indicator
4863-504-80-11	Sextant	Trim Indicator
49310-31	Sextant	Pressurization Indicator
501-1318-01	J.E.T.	Static Converter
5018-753-00-00	Sextant	Mixing Audio Amplifier
5126-220-80-11	Sextant	Fuel Temp. Indicator
5126-223-80-11	Sextant	Fuel Temp. Indicator
5427-404-80-10	Sextant	COMPT/Duct Indicator
5677-406-80-13	Sextant	Dual Oil Press/ Temp. Indicator
5677-407-80-14	Sextant	Dual Oil Press/ Temp. Indicator
5677-409-80-10	Sextant	Dual Oil Press/ Temp. Indicator
5677-420-80-10	Sextant	Dual Oil Press/ Temp. Indicator
5677-421-80-10	Sextant	Dual Oil Press/ Temp. Indicator
5677-705-80-10	Sextant	NH, NL Speed Indicator
5677-750-80-12	Sextant	Torque Indicator
5677-755-80-11	Sextant	Torque Indicator
5677-756-80-10	Sextant	Torque Indicator
5677-765-80-10	Sextant	Torque Indicator
5677-766-80-10	Sextant	Torque Indicator
5678-553-80-12	Sextant	Turbine Temp. Indicator
5678-555-80-10	Sextant	Turbine Temp. Indicator
5678-559-80-10	Sextant	Turbine Temp. Indicator
5678-704-80-11	Sextant	NH Indicator
5678-705-80-12	Sextant	NH Indicator
5678-710-80-12	Sextant	NP Indicator
5678-711-80-10	Sextant	NP Indicator

5678-713-80-10	Sextant	NP Indicator
5678-715-80-10	Sextant	NP Indicator
5678-716-80-10	Sextant	NP Indicator
64050-660-1	Sextant	Airspeed Indicator
64050-661-1	Sextant	Airspeed Indicator
64050-662-1	Sextant	Airspeed Indicator
64050-663-1	Sextant	Airspeed Indicator
64131-560-1	Sextant	Counter Pointer Altimeter
64131-760-1	Sextant	Counter Pointer Altimeter
656-767	Honeywell/Sperry	Compensator
7002638-9XX	Honeywell/Sperry	TAS/Temp Indicator
748-465-4	Intertechnique	Fuel Quantity Indicator
748-465-5	Intertechnique	Fuel Quantity Indicator
748-522-1	Intertechnique	Fuel Quantity Indicator
748-522-2	Intertechnique	Fuel Quantity Indicator
748-681-1	Intertechnique	Fuel Quantity Indicator
748-681-2	Intertechnique	Fuel Quantity Indicator
748-682-1	Intertechnique	Fuel Quantity Indicator
748-682-2	Intertechnique	Fuel Quantity Indicator
748-722	Intertechnique	Repeater Indicator
748-724	Intertechnique	Repeater Indicator
749-158	Intertechnique	Fuel Quantity Indicator
749-159	Intertechnique	Fuel Quantity Indicator
749-160	Intertechnique	Fuel Quantity Indicator
749-161	Intertechnique	Fuel Quantity Indicator
749188	Intertechnique	Triple Pressure Indicator
749757	Intertechnique	Fuel Quantity Indicator
749758	Intertechnique	Fuel Quantity Indicator
749759	Intertechnique	Fuel Quantity Indicator
749760	Intertechnique	Fuel Quantity Indicator
8107-110-00-10	MORS	Engine Oil Pressure Sensor
940605-31	Faure Herman	Flow Meter Indicator
940605-32	Faure Herman	Flow Meter Indicator
940605-41	Faure Herman	Flow Meter Indicator
940605-42	Faure Herman	Flow Meter Indicator
940-638-X	Faure Herman	Fuel Flow Meter Indicator
940-639-X	Faure Herman	Fuel Flow Meter Indicator
AI-804	J.E.T.	Attitude Indicator
C14129BA	Sextant	Altimeter
C14130AA	Sextant	Altimeter
C16222AA01	Sextant	Torque Indicator
PC-251	Marathon Flite-Tronics	250 VA Static Inverter
SC-841A	J.E.T.	Static Converter
WL1001KCA1	S.I.R.S.	Standby Compass